# **User Manual**



PV Hybrid Inverter SPE 12000 ES SPE 10000 ES SPE 8000 ES



044.SK0014900

Version: 1.0

## Table Of Contents

<b>1.I</b> ı	nformation on this Manual	1
	1.1 Validity	1
	1.2 Scope	1
	1.3 Target Group	1
	1.4 Safety Instructions	1
2. F	Product Overview	2
	2.1 Product Features	2
	2.2 Panel and Port Definitions	3
3. I	nstallation Instructions	4
	3.1 Accessory list	4
	3.2 Points for attention	4
	3.3 Battery Connection	5
	3.3.1 Wiring preparation	5
	3.3.2 Battery power cable connection	5
	3.3.3 Lithium battery communication cable connection	6
	3.4 AC Connection	7
	3.4.1 Connection preparation	7
	3.4.2 Grid/GEN/ Load/ Smart Load wires Connection	7
	3.5 PV Connection	9
	3.5.1 Connection preparation	9
	3.5.2 PV cable Connection:	9
	3.6 Communication Connection	10
	3.7 Dry Contact Signal	10
	3.8 CT Connection	10
	3.9 Wiring system for inverter	11
4. 0	Operation	12
	4.1 Power ON/OFF	12
	4.2 Display Panel Introduction	12
	4.2.1 LCD Display Icons	13
	4.2.2 Display Information	14
	4.2.3 Operating Mode Description	17
	4.3 LCD parameter setting	18
	4.3.1General settings	18
	4.3.2Hide settings	30
5. F	Parallel Installation Guide	32
	5.1 Parallel accessories	32
	5.2 Points of Attention for Parallel	32
	5.3 Wire Connections	32
	5.3.1 Single-phase parallel wire connection	32

	5.3.2 Three-phase parallel wire connection	34
	5.3.3 CT wire connection	35
	5.4 Parallel Example	36
	5.5 Parallel setup and display	37
	5.6 Example of a parallel system diagram	38
6.	. Fault Reference Code	40
	6.1 Fault Reference Code	40
	6.2 Warning Indicator	41
7.	. Specifications	42
	7.1 PV Specification	42
	7.2 AC Input Specification	42
	7.3 Grid Feeding Specification	42
	7.4 Battery Mode Specification	43
	7.5 Two Load Output Power Specification	43
	7.6 Overload Capability Specification	43
	7.7 Battery & Charger Specification	44
8.	. Appendix	46
Αį	ppendix I. Fault information and processing	46
Αį	ppendix II Restore factory settings	48
Αį	ppendix III Battery Equalization	48
Αį	ppendix IV Routine maintenance	50
Αı	ppendix V WIFI Monitoring	50

### 1.Information on this Manual

### 1.1 Validity

This manual is valid for the following devices:

- ▶ SPE 12000 ES
- ▶ SPE 10000 ES
- ▶ SPE 8000 ES

### 1.2 Scope

This manual describes the assembly, installation, operation and troubleshooting of this unit. Please read this manual carefully before installations and operations.

### 1.3 Target Group

This document is intended for qualified persons and end users. Tasks that do not require any particular qualification can also be performed by end users. Qualified persons must have the following skills:

- Knowledge of how an inverter works and is operated.
- Training in how to deal with the dangers and risks associated with installing and using electrical devices and installations.
- Training in the installation and commissioning of electrical devices and installations.
- ▶ Knowledge of the applicable standards and directives.
- ▶ Knowledge of and compliance with this document and all safety information.


### 1.4 Safety Instructions

MARNING: This chapter contains important safety and operating instructions.

Read and keep this manual for future reference.

- Before using the unit, read all instructions and cautionary marking on the unit, the batteries and all
  appropriate sections of this manual. The company has the right not to quality assurance, if not according to
  the instructions of this manual for installation and cause equipment damage.
- 2. All the operation and connection please professional electrical or mechanical engineer.
- 3. All the electrical installation must comply with the local electrical safety standards.
- 4. When install PV modules in the daytime, installer should cover the PV modules by opaque materials, otherwise it will be dangerous as high terminal voltage of modules in the sunshine.
- CAUTION-To reduce risk of injury, charge only deep-cycle lead-acid type rechargeable batteries and lithium batteries. Other types of batteries may burst, causing personal injury and damage.
- Please be clear which kind of battery system you want, lithium battery system or lead-acid battery system, if you choose the wrong system, energy storage system can't work normally.
- 7. **NEVER** charge a frozen battery.
- 8. Be very cautious when working with metal tools on or around batteries. A potential risk exists to drop a tool to spark or short circuit batteries or other electrical parts and could cause an explosion.
- 9. For optimum operation of this inverter, please follow required spec to select appropriate cable size. It's very important to correctly operate this inverter.
- Please strictly follow installation procedure when you want to disconnect AC or DC terminals. Please refer to INSTALLATION section of this manual for the details.
- 11. GROUNDING INSTRUCTIONS -This inverter should be connected to a permanent grounded wiring system. Be sure to comply with local requirements and regulation to install this inverter.
- NEVER cause AC output and DC input short circuited. Do NOT connect to the mains when DC input short circuits.
- 13. Make sure the inverter is completely assembled, before the operation.
- 14. Do not disassemble the unit. Take it to a qualified service center when service or repair is required. Incorrect re-assembly may result in a risk of electric shock or fire.
- 15. To reduce risk of electric shock, disconnect all wirings before attempting any maintenance or cleaning. Turning off the unit will not reduce this risk.
- 16. This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

### 2. Product Overview

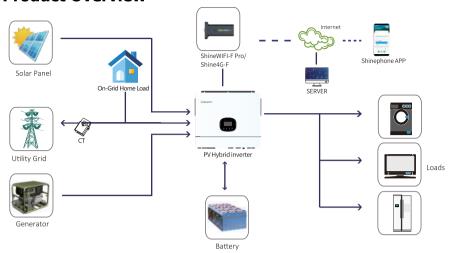

Hybrid Power System

This is a multifunctional PV Hybrid inverter, integrated with a MPPT solar charge controller, a high frequency pure sine wave inverter and a UPS function module in one machine, which is perfect for off grid backup power and self-consumption applications. This inverter can work with or without batteries.


The whole system also need other devices to achieve complete running such as PV modules, generator, or utility grid. Please consult with your system integrator for other possible system architectures depending on your requirements. The WiFi / 4G module is a plug-and-play monitoring device to be installed on the inverter. With this device, users can monitor the status of the PV system from the mobile phone or from the website anytime anywhere.

### 2.1 Product Features

- ▶ Rated power 8KW to 12KW, power factor 1.
- ▶ 2 strings of MPPT, Max. PV array power 10000watt to 15000watt.
- ▶ MPPT Voltage range 60Vdc-480Vdc, 550Voc.
- ▶ Pure sine wave inverter and MPPT solar charge controller integrated inside.
- ▶ Built-in ATS for automatic grid and generator switching.
- Able to work with or without battery.
- ▶ With CAN/RS485 for BMS communication.
- WIFI/4G wireless monitoring(optional).
- Parallel operation up to 9 unit(only with battery connected).
- With grid tied function.
- With dual outputs.
- With grid peak shaving.
- With external CT for zero exporting into grid.

### 2.2 Panel and Port Definitions



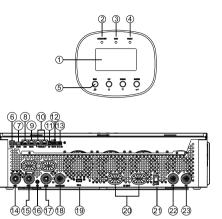

Panel operation				
1. LCD display	2. Status indicator			
3. Charging indicator	4. Fault indicator			
5. Function buttons				
Communication port				
6. USB communication port	19. WiFi / 4G communication port			
8. BMS communication port (support CAN/RS485 )	9. RS485 communication port (for expansion)			
10. Parallel communication ports	11.DIP			
Connection port				
14. Generator input	15. Grid input			
16.PE	17. AC output(main)			
18. AC output(smart load)	20. Battery input			
22. PV1 input	23. PV2 input			
Other				
12. EXT CT	13. Dry contact			
21. Power on/off switch				

### 3. Installation Instructions

### 3.1 Accessory list


Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. You should have received the following items in the package:

Part Li	st							
Item	Item Name	Qty	Α	В	С	D	Ε	F
Α	The unit	1		•	n.			- Carrows
В	Communication cable	1			4	$\bigcirc$		
С	Parallel communication cable	1	]  _	W		\\/	S035-8	PURIOR MANUFACTURE IN CONTROL OF THE PURIOR PARTY AND ADDRESS OF THE PURIOR
D	R-type terminal	1	🕮	<b>*</b>		П	H	
Е	O-type terminal	4		Ð	Ø .		ш	==
F	User manual	1	1		-			

#### 3.2 Points for attention

Consider the following points before selecting where to install: Install this inverter at eye level in order to allow the LCD display to be read at all

- The ambient temperature should be between 0°C and 50°C to ensure optimal operation.
- The recommended installation position is to be adhered to the wall vertically.
- Do not install in too narrow confined space and pay attention to ventilation.
- ▶ Be sure to keep other objects and surfaces as shown in the right diagram to guarantee sufficient heat dissipation and to have enough space for removing wires.

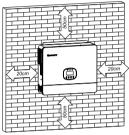


If the energy storage is installed in areas with salt damage, it will be corroded and may cause fire.

Therefore, do not install it outdoors in areas with salt damage. The areas with salt damage are defined as the areas which are not 500m away from shore or will be affected by sea breezes. The areas affected by the sea breezes vary depending on meteorological conditions (e.g. typhoons, monsoons) or topographical conditions (dams, hills).



SUIABLE FOR MOUNTING ON CONCRETE OR OTHER NON-COMBUSTIBLE SURFACE ONLY.

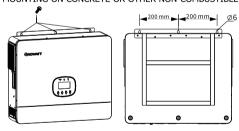

Install the unit by screwing three screws. It's recommended to use M4 or M5 screws. Preparation for wiring.

Before connecting all wiring, please take off bottom cover by removing four screws as shown below.



### 3.3 Battery Connection

**M**WARNING

- All wiring must be performed by a qualified person.
- Shock Hazard: Installation must be performed with care due to high battery voltage in series.
- Always disconnect all circuit breakers before making connections to the battery power cable.
- Make sure the battery power cable positive (+) must be connected to battery positive (+), negative (-) must be connected to battery negative (-).
- Do not place anything between the flat part of the inverter terminal and the ring terminal. Otherwise, a short circuit may occur, resulting in overheating and fire.
- Do not apply anti-oxidant substance on the terminals before terminals are connected tightly.

#### 3.3.1 Wiring preparation

 For safety operation and regulation compliance, it's requested to install a separate DC breaker (over-current protector) or disconnect device between battery and inverter. It may not be requested to have a disconnect device in some applications, however, it's still requested to have DC breaker installed. Please refer to typical amperage in below table as required breaker size.

Recommended DC breaker specification of battery for a single inverter:

Model	1 unit*
SPE 12000 ES	400A / 60VDC
SPE 10000 ES	350A / 60VDC
SPE 8000 ES	300A / 60VDC

2. It's very important for system safety and efficient operation to use appropriate cable for battery connection. To reduce risk of injury, please use the proper recommended cable and terminal size as below. Recommended battery cable and terminal size:

Model	Wire	Torque value	
SPE 12000 ES	2 * 2 AWG	33.62mm²	2-3 Nm
SPE 10000 ES	2 * 2 AWG	33.62mm²	2-3 Nm
SPE 8000 ES	2 * 3 AWG	26.67mm²	2-3 Nm



5


3. Battery Module Selection: Choose the appropriate battery according to the actual situation.

Battery Type	SPE 12000 ES	SPE 10000 ES	SPE 8000 ES
Lead-acid Battery	400Ah capacity battery	300Ah capacity battery	300Ah capacity battery
Lithium Battery	400Ah capacity battery	300Ah capacity battery	300Ah capacity battery

#### 3.3.2 Battery power cable connection

Please follow below steps to implement battery connection:

- 1. Assemble battery ring terminal based on recommended battery cable and terminal size.
- 2. Connect all battery packs as units requires.
- 3. Insert the ring terminal of battery cable flatly into battery connector of inverter and make sure the bolts are tightened with torque of 2Nm. Make sure polarity at both the battery and the inverter/charge is correctly connected and ring terminals are tightly screwed to the battery terminals.

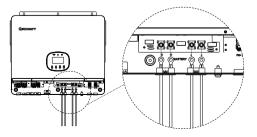


#### 3.3.3 Lithium batterycommunication cable connection

If used with lithium batteries, make sure to connect the BMS communication cable between the battery and the inverter. It is recommended to use lithium batteries that have been tested with our configuration.

Please follow below steps to implement BMS communication cable connection:

1. Connect one end of the battery's communication cable to the inverter's BMS communication port (below left), which supports RS485 or CAN protocols.

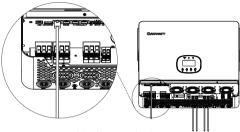


2. The other end of the battery communication cable plugs into the battery communication port (RS485 or CAN).



3. The inverter BMS port pin and RS485 port pin assignment shown as below:

Pin number	BMS port	RS485 port (for expansion)
1	RS485B	RS485B
2	RS485A	RS485A
3		
4	CANH	
5	CANL	
6		
7		
8		

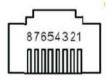

**Note:** The RS485 port (for expansion) is used for communication expansion and connection to external devices. **Note:** In order to ensure the normal communication of lithium battery BMS, please set the battery type as "Li" in program 5, and then LCD will automatically switch to program 36 to select the communication protocol. You can Choose RS485 communication protocol which is from L01 to L50, and you can also choose CAN Communication protocol which is from L51 to L99. (About the specific protocol address of the inverter, please consult the dealer or manufacturer to choose which communication protocol to match the BMS).

#### 3.4 AC Connection

MARNING!

- All wiring must be performed by a qualified personnel.
- Shock Hazard: Be sure that AC power source is disconnected before attempting to wire it to the unit.
- Always disconnect all circuit breakers before making Grid/ GEN/ AC output connection.
- Be sure to connect AC wires with correct polarity. If L and N wires are connected reversely, it
  may cause utility short-circuited when these inverters are worked in parallel operation.
- There are four terminal blocks with "Grid", "GEN" and "Load" and "Smart Load" markings. Please do not mistakenly connect the input and output connectors.
- Appliances such as air conditioner are required at least 2~3 minutes to restart because it's required to have enough time to balance refrigerant gas inside of circuits. If a power shortage occurs and recovers in a short time, it will cause damage to your connected appliances. To prevent this kind of damage, please check with manufacturer of air conditioner that if it's equipped with time-delay function before installation. Otherwise, this off grid solar inverter will trig overload fault and cut off output to protect your appliance but sometimes it still causes internal damage to the air conditioner.

#### 3.4.1 Connection preparation

1. Before connecting to AC input power source, please install a separate AC breaker between inverter and Grid power source. This will ensure the inverter can be securely disconnected during maintenance and fully protected from over current of Grid. Please refer to typical amperage in below table as required breaker size.

Recommended breaker specification of Grid for a single inverter:

Model	1 unit*
SPE 12000 ES	70A / 230VAC
SPE 10000 ES	70A / 230VAC
SPE 8000 ES	70A / 230VAC

2. It is very important for system safety and efficient operation to use appropriate cable for Grid connection , GEN connection, Load connection and Smart Load connection. To reduce risk of injury, please use the proper recommended cable size as below.

Recommended AC wires size:

Model	AC Input Wire Size		AC Output	Wire Size	Torque value
SPE 12000 ES	1 * 6 AWG	13.3mm²	1 * 6 AWG	13.3mm²	1.2-1.6 Nm
SPE 10000 ES	1 * 6 AWG	13.3mm²	1 * 7 AWG	10.55mm²	1.2-1.6 Nm
SPE 8000 ES	1 * 6 AWG	13.3mm²	1 * 8 AWG	8.37mm²	1.2-1.6 Nm

#### 3.4.2 Grid/GEN/ Load/ Smart Load wires Connection:


Please follow the steps below to make Load/ Smart Load /Grid/GEN connections:

- 1. Remove the insulation covers of the seven wires.
- Connect the PE protection line first, and then lock in the Load, Smart Load line, Grid line, and GEN line in order.
- 3. Corresponding polarity positions marked on the terminals.

Please refer to the following:

- $\bigoplus$   $\rightarrow$ Ground (yellow- green) L $\rightarrow$ LINE (brown or black) N $\rightarrow$  Neutral (blue)
- 1. Insert first Load wires according to polarities indicated on terminal block and ensure that the buckle presses the wire tightly.
- L→ LINE (brown or black)


#### N→ Neutral (blue)

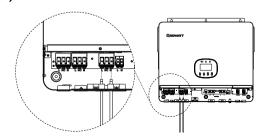

Insert Smart Load wires according to polarities indicated on terminal block and ensure that the buckle presses the wire tightly.

#### L→ LINE (brown or black)


#### N→ Neutral (blue)

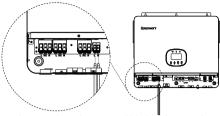

3. Insert Grid wires according to polarities indicated on terminal block and ensure that the buckle presses the wire tightly.

#### L→ LINE (brown or black)


#### N→ Neutral (blue)

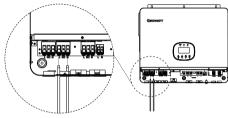


4.Insert GEN wires according to polarities indicated on terminal block and ensure that the buckle presses the wire tightly.

#### L→ LINE (brown or black)

#### N→ Neutral (blue)

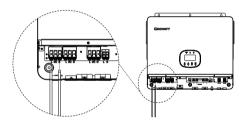

5. Make sure the inverter metal housing is grounded (Ground in the grid system).

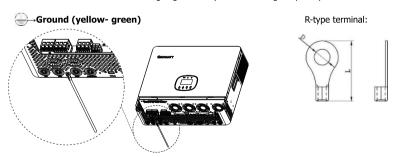

#### **Precautions:**

- 1) Before performing the above operations, please ensure that your operating environment is: Non-energized environment
- 2) After inserting the wire according to the polarity marked on the terminal, don't forget to check that the screw is tightened or the buckle presses the wire tightly.
- 3) After you complete all wiring, please check again to confirm whether the corresponding wires are connected in the correct position to avoid misoperation that may cause the inverter to fail to work properly or damage your equipment. These details that cannot be ignored ensure a good user experience to a certain extent.

#### 3.5 PV Connection

⚠ WARNING!

- All wiring must be performed by a qualified personnel.
- Shock Hazard : Operation with power on is strictly prohibited.
- Before connecting the PV input, be sure to turn off all circuit breakers and confirm that the machine is powered off.
- Be sure to connect PV cable with correct polarity.

#### 3.5.1 Connection preparation

1. Before connecting to PV modules, please install separately a DC circuit breaker between inverter and PV modules.

Recommended breaker specification of PV input for a single inverter:

Model	1 unit*	
SPE 12000 ES	27A / 550Vdc	
SPE 10000 ES	27A / 550Vdc	
SPE 8000 ES	27A / 550Vdc	

2.It' very important for system safety and efficient operation to use appropriate cable for PV module connection. To reduce risk of injury, please use the proper recommended cable size as below

Model	Wire	Torque value	
SPE 12000 ES	1 * 9 AWG	8.4mm²	1.2-1.6 Nm
SPE 10000 ES	1 * 9 AWG	8.4mm²	1.2-1.6 Nm
SPE 8000 ES	1 * 9 AWG	8.4mm²	1.2-1.6 Nm

#### 3. PV Module Selection:

When selecting proper PV modules, please be sure to consider below parameters:

- 1.Open circuit Voltage (Voc) of PV modules not exceeds max. PV array open circuit voltage of inverter. Exceeding the limit will cause damage to the inverter.
- 2.Open circuit Voltage (Voc) of PV modules should be higher than start-up voltage. Lower than will lead to insufficient photovoltaic.


INVERTER MODEL	SPE 12000 ES	SPE 10000 ES	SPE 8000 ES		
Max. PV Array Open Circuit Voltage	550Vdc				
Start-up Voltage	120Vdc				
PV Array MPPT Voltage Range	60Vdc~480Vdc (Recommend 380 Vdc )				
Quantity Of PV Panels	Recommend 2~11 photovoltaic panels				

#### 3.5.2 PV cable Connection:

Please follow below steps to implement PV module connection:



- 1. Remove insulation sleeve 10 mm for positive and negative conductors.
- 2. then connect positive pole (+) of connection cable to positive pole (+) of PV input connector, connect negative pole (-) of connection cable to negative pole (-) of PV input connector.

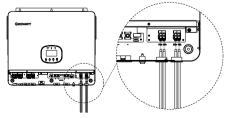

9

### 3.6 Communication Connection

Please use supplied communication cable to connect to inverter and PC. Follow on-screen instruction to install the monitoring software. For the detailed software operation, please check user manual of software. The monitoring software is downloadable from our website <a href="https://www.ginverter.com">www.ginverter.com</a>.

## 3.7 Dry Contact Signal

There is one dry contact(3A/250VAC) available on the rear panel. Dry contacts are used to connect generators. As shown in the table below. When the inverter meets the conditions on the left, it will perform the function on the right. It could be used to deliver signal to external device When the following conditions are met.

			•	Dry contact	port:	
Unit Status	Condition			NC NC	NC C NO	
				NC & C	NO & C	
If program 24 is	set to automatic					
Power Off	Unit is off and n	o output is powe	red	Close	Open	
	Output is power	ed from Utility		Close	Open	
	Program 01 set as Utility first  Output is powered from Battery or Solar Program 01 is set as SBU or Solar first	Battery voltage (SOC)< Low DC warning voltage(SOC)	Open	Close		
Power On		•	Battery voltage(SOC) > Setting value in Program 13 or battery charging reaches floating stage	Close	Open	
			Battery voltage (SOC) < Setting value in Program 12	Open	Close	
		Battery voltage (SOC)> Setting value in Program 13 or battery charging reaches floating stage	Close	Open		
If program 24 is	set to enable					
Power On	Output is powered from Battery or Solar	,	always sends a power-on signal.	Open	Close	
If program 24 is	set to disable					
Power On	Output is powered from Battery or Solar					

#### 3.8 CT Connection

CT is an optional accessory that needs to be purchased separately. Currently, the available optional CT specifications are as follows:

Part number	CT specification	Recommender system	Property	
013.SK0000500	100A-50mA /	Single system or 3 Pcs three-phase	South African single	
013.5K0000500	2000:1 / 4m	parallel system	camera standard	
013.SK0002500	100A-50mA /	Single system or 3 Pcs three-phase	North American single	
013.5K0002500	2000:1 / 10m	parallel system	camera standard	
013.SK0002800	250A-62.5mA /	2-3 Pcs Single phase parallel or 6 Pcs	Additional purchase	
013.3K0002600	4000:1 / 10m	three-phase parallel system	Additional purchase	
013.SK0002900	500A-66.7mA /	4-6 Pcs Single phase parallel	Additional purchase	
013.5K0002900	7500:1 / 10m	4-0 PCS Sirigle priase parallel	Additional purchase	


The specific installation method is as follows.

Note: The L line passes through the CT, and the arrow on the CT indicates the current direction points to the inverter.

Connect the two signal wires coming out of the CT to the terminal marked EXT CT:


White line→ No. 1 Signal Terminal (CT-L-I+)

Black line→ No. 2 Signal Terminal (CT-L-I-)

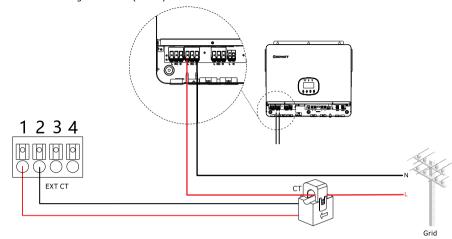


Final Assembly

Double check that all wiring is correct. Please put bottom cover back by screwing four screws as shown below.

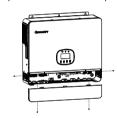


## 3.9 Wiring system for inverter

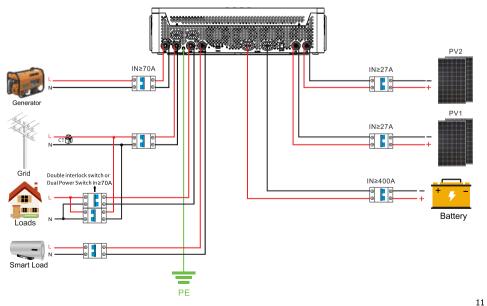

## 4. Operation


## 4.1 Power ON/OFF

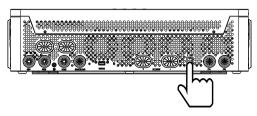

After correct installation, switch on the battery switch, switch on the inverter switch, wait about 30 seconds, inverter output.

### **4.2 Display Panel Introduction**

The operation and display panel, shown in below chart, is on the front panel of the inverter. It includes three indicators, four function keys and a LCD display, indicating the operating status and input/output power information.

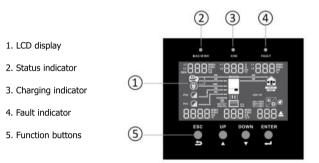


#### LED Indicator

LED Indicator			Messages
Mark and Market	Croon	Solid On	Output is powered by utility in Line mode.
<b>☀</b> AC/ <b>☀</b> INV	Green	Flashing	Output is powered by battery or PV in battery mode.
	Croon	Solid On	Battery is fully charged.
<b>₩</b> CHG	Green	Flashing	Battery is charging.
	Red	Solid On	Fault occurs in the inverter.
<b>▲ FAULT</b>	Reu	Flashing	Warning condition occurs in the inverter.

#### **Function Buttons**

Button	Description	
ESC	To exit setting mode	
UP	To go to previous selection	
DOWN	To go to next selection	
ENTER	To confirm the selection in setting mode or enter setting mode	

### 4.2.1 LCD Display Icons

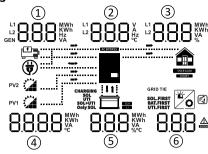


Icon	Description		
AC Input Information	1		
<del>(</del>	Grid icon		
	Generator icon		
1	Indicate AC input power, AC input voltage, AC input frequency, AC input current		
AC BYPASS	Indicate AC power loads in bypass		
PV Input Information	on		
PV1 PV2	Left: PV1 input icon Right: PV2 input icon		
4	Indicate PV power, PV voltage, PV current, etc		
Output Information			
_	Inverter icon		
2	Indicate output voltage, output current, output frequency, inverter temperature		
Load Information			
	Load icon		
3	Indicate power of load, power percentage of load		
OVERLOAD	Indicate overload happened		
SHORT	Indicate short circuit happened		
Battery Information			
	Indicate battery level by 0-24%, 25-49%, 50-74% and 75-100% in battery mode and charging status in line mode.		
(5)	Indicate battery voltage, battery percentage, battery current		
SLA	Indicate SLA battery		
	Indicate lithium battery		
CHARGING SOL SOL+UTI Only SOL	Indicate charging source priority: solar first, solar and utility, or only solar		
Other Information			
	Indicate output source priority: solar first, utility first, SBU mode or SUB		
SOL.FIRST BAT.FIRST UTI.FIRST	mode		
(6)	Indicate warning code or fault code		
<b>*</b>	Indicate a warning or a fault is happening		
•	Indicate it's during setting values		
	Indicate the alarm is disabled		


In battery charge m	In battery charge mode, battery icon will present Battery Charging Status				
Status	Battery voltage	LCD Display			
	<48V	4 bars will flash in turns.			
Constant Current	48 ~ 50V	Bottom bar will be on and the other three bars will flash			
mode / Constant		in turns.			
Voltage mode	50 ~ 52V	Bottom two bars will be on and the other two bars will			
		flash in turns.			
	> 52V	Bottom three bars will be on and the top			
		bar will flash.			
Floating mode. Batteries are fully charged.		4 bars will be on.			


In battery discharge mode, battery icon will present Battery Capacity					
Load Percentage	Battery Voltage	LCD Display			
	< 41.2V				
Load >50%	41.2~43.2V				
	43.2~45.2V				
	> 45.2V				
	< 43.6V				
50%> Load > 20%	43.6~46V				
	46~47.6V				
	> 47.6V				
	< 44.8V				
Load < 20%	44.8~46.8V				
	46.8~48.8V				
	> 48.8				

#### 4.2.2 Display Information

The LCD display information will be switched in turns by pressing "UP" or "DOWN" key. The selectable information is switched as below order: voltage, frequency, current, power, temperature, energy, firmware version.

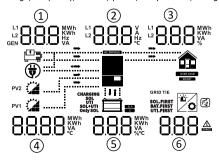

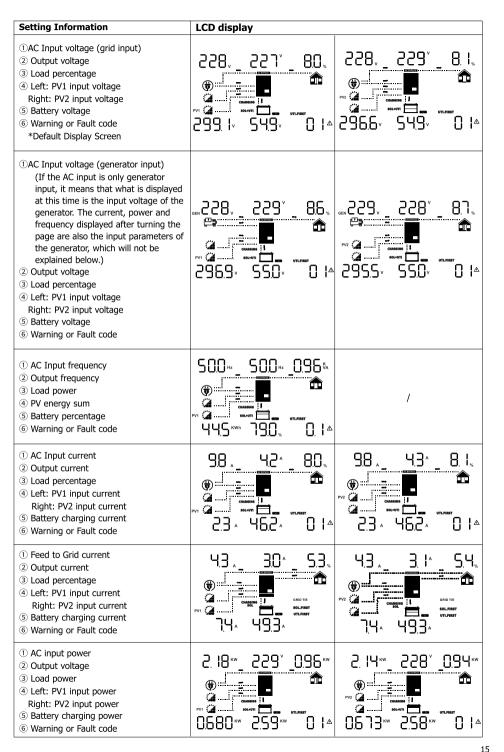

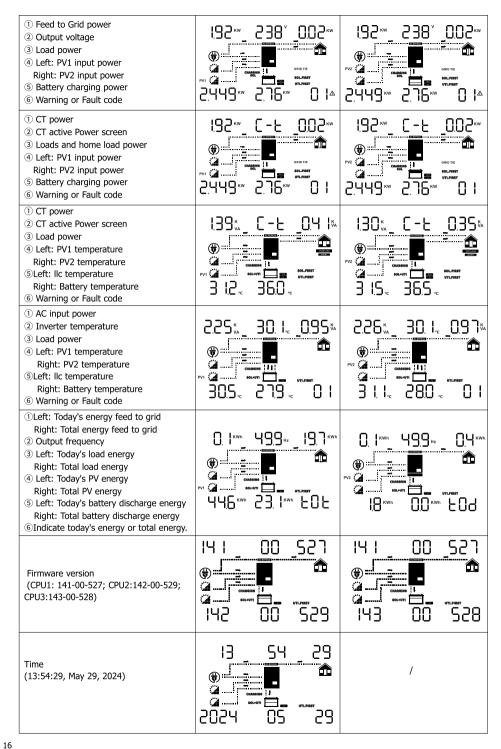

#### 4.2.3 Operating Mode Description

Operation mode	Description	LCD display
Standby mode /Power saving mode Note:		Charging by PV energy No charging
*Standby mode: The inverter is not turned on yet but at this time, the inverter can charge battery without AC output.  *Power saving mode: If enabled, the output of inverter will be off when connected load is pretty low or not detected.	No output is supplied by the unit but it still can charge batteries.	CHARABINE I STORY
Fault mode		Charging by PV energy No charging
Note: *Fault mode: Errors are caused by inside circuit error or external reasons such as over temperature, output short circuited and so on.	PV energy can charge batteries.	CMARINE I SOL-UTI SOL-
Line Mode	The unit will provide output power from the mains. It can also charge the battery at line mode.	No battery connected
Feeds grid Mode	Solar feeds to the grid or battery feeds to the grid	PV energy charges battery, PV energy provides power to the load and feeds remaining energy to the grid.  Sol First UTL FIRST  Battery energy provides power to the load and feeds remaining energy to the grid.
Battery Mode	The unit will provide output power from battery and PV power.	Power from battery and PV energy  Power from battery only

### 4.3 LCD parameter setting

#### 4.3.1General settings

After pressing and holding ENTER button for 3 seconds, the unit will enter setting mode. Press "UP" or "DOWN" button to select setting programs. Then press "ENTER" button to confirm the selection or ESC button to exit.

		s. Then press "ENTER" button to confirm the selection or ESC button to exit.							
Program	Description	Setting Option							
		TY0: User-d	efined set	tings(defau	ılt)				
		This shortcut initial default actual needs	values, a						
		TY1: On Gri  FEED Change the of Program Value Program Value The values of	default val 01 SUB 69 12KW f these set	03 UPS 71 DIS ttings repre	14 SNU 76 DIS esent a bri	55 BLU 78 0 ef descript	67 ENA 79 DIS	68 SAF 80 24KW	
		Solar energy standard of t the power gi The specific	the South . rid is 12KW	African pov	wer grid, a				
99	Quick Settings * After setting TY1, TY2, or TY3, the initial default values of some settings will be changed. Users can set them	1. Load prie When there loads, and es solar energy, when there i discharge. When there When utility	is solar en xcess power solar ene s insufficie is no solar	ergy: solar er is charge rgy and uti ent solar er energy, ut	ed to the tility supply nergy and	poattery; who power to no utility, to tizes supply	nen there i the loads the battery ying power	s insufficient together; will to the load.	t
	based on actual usage, which can help users quickly set the inverter settings	2.Charging priority setting: solar energy and utility jointly charge the battery, and utility charging time is executed according to the program 75 setting time.							
		used to pow LBU: Solar e to the batter LUB: Solar e grid, and fina	): Solar en er the load nergy is pr y, and fina nergy is pr ally there i	ergy priori I, and final rioritized to Illy the rem- rioritized to s surplus e	ly the remotion power the naining end power the power th	aining ene e load, exc ergy is fed e load, exc	ergy is fed cess energ to the gricess energ	y is charged d.	
		4. Battery of The battery			nly when th	here is no	utility.		
		TY2: Zero E Change the	F. 75	09 <u>9</u>	followina s	settinas as	follows:		
		Program	01	03	14	55	67	68	
		Value	SUB	UPS	SNU	LUB	ENA	SAF	
		Program	69	71	76	78	79	80	
		Value	12KW	ENA	EAN	0	DIS	24KW	

The values of these settings represent a brief description:

Solar and battery energy can be fed into the power grid, default is the certification standard of the South African power grid, and the maximum power fed into the power grid is 12KW. At the same time, the anti-backflow power is 0KW.

The specific priorities are as follows:

#### 1. Load priority setting:

When there is solar energy: when there is sufficient solar energy, the solar energy is prioritized to supply power to the load, and then fed into the grid, and the excess is used to charge the battery; when there is insufficient photovoltaic energy, during the battery feeding time (Program 74), the solar energy and the battery supply power to the load and the grid together; when not during the battery feeding time (Program 74), the solar energy and utility supply power to the load together.

When there is no solar energy: during the battery feeding time (program 74), the battery supplies power to the load and feeds the grid; outside the battery feeding time (program 74), utility supplies power to the load.

#### 2.Charging priority setting:

When there is solar energy, the solar energy charges the battery with excess energy after loading and feeding the grid; when there is no solar energy, utility sets the charging time according to program 75.

#### 3. Solar priority setting:

BLU: Solar energy prioritizes charging the battery, excess energy is used to power the load, and finally the remaining energy is fed to the grid. LBU: Solar energy is prioritized to power the load, excess energy is charged to the battery, and finally the remaining energy is fed to the grid. LUB (default): Solar energy is prioritized to power the load, excess energy is fed to the grid, and finally there is surplus energy to charge the battery.

#### 4. Battery energy priority:

When there is sufficient solar energy, the excess solar energy charges the battery.

When the solar energy is insufficient, the battery is allowed to discharge during the feeding period according to program 74.

TY3: Off Grid Mode

OFFC FA3 099

Change the default values of the following settings as follows:

Program	01	03	14	55	67	68
Value	UTI	APL	CSO	BLU	DIS	SAF
Program	69	71	76	78	79	80
Value	12KW	DIS	DIS	0	DIS	24KW

The values of these settings represent a brief description:

Grid connection is not enabled, enter off grid mode.

The specific priorities are as follows:

#### 1. Load priority setting:

When there is utility: during the output time of program 50, utility bypasses to supply power to the load; outside the output time of utility, the battery and photovoltaic supply power to the load.

When there is no utility: battery and solar energy provide power to the load.

#### 2. Charging priority setting:

Prioritize solar energy to charge the battery.

When there is solar energy, solar energy charges the battery.

When there is no solar energy, utility charges the battery during the program 50 grid output time and the program 49 utility charging time.

			BOLTHER O		
		Solar first	OPPC SOL OO'I		
		If solar energy is not suf energy will supply powe Utility provides power to - Solar energy is not ava	ower to the loads as first priority.  fficient to power all connected loads, battery or the loads at the same time.  the loads only when any one condition happens:  ailable to either low-level warning voltage or the setting point		
	Output source priority: To	Utility first	OPPC UŁI ÖDÎ		
01	configure load power source priority. (After program 67 are		r to the loads as first priority. y will provide power to the loads only when utility		
	enabled, this program is fixed SUB and cannot be set.)	SBU priority	OPPC S6U OOÎ		
		If solar energy is not sur supply power to the load Utility provides power to	ower to the loads as first priority.  fficient to power all connected loads, battery will  ds at the same time.  the loads only when battery voltage drops to either  le or the setting point in program 12.		
		SUB priority(default)	OPPC SUB OO I		
		If solar energy is not suf will power loads at the s	ower to the loads as first priority.  fficient to power all connected loads, solar and utility same time.  to the loads only when solar energy is not sufficient		
	Maximum charging current:	CHC I 150	· 002		
02	set total charging current for solar and utility chargers.	SPE 12000 ES: Default 120A, 0A~250A Settable.  SPE 10000 ES: Default 120A, 0A~220A Settable.  SPE 8000 ES: Default 120A, 0A~190A Settable.  (Max. charging current = utility charging current + solar charging current)  (If LI is selected in Program 5, this program can't be set up)			
		Appliance (default)			
03	AC input voltage range (After program 67 are enabled, this program is fixed	RCU RPL If selected, acceptable A 90~280VAC	OO3 AC input voltage range will be within:		
	UPS and cannot be set).	UPS	_		
		RCU UPS If selected, acceptable A 170~280VAC	OO 3 AC input voltage range will be within:		
		Saving mode disable (de	efault)		
	Down so do v	SRUE all S If disabled, no matter co inverter output will not b	onnected load is low or high, the on/off status of be effected.		
04	Power saving mode enable/disable	Saving mode enable			
		SRUE ENR If enabled, the output o low or not detected.	f inverter will be off when connected load is pretty		

AGM (default)—Suitable for lead-acid battery

HRLL RGT 005

Items that cannot be set 19 20 21 default 56.4V 54V 42V

Items that can be set:	default	Set range	Set requirements
02	120A	0A~250A	
11	60A	0A~250A	
12	46V	44~51.2V	<13 setting value
13	54v	48~58.0V	

Flooded—Suitable for lead-acid battery or flood battery

 Items that cannot be set:
 19
 20
 21

 default
 58.4V
 56V
 42V

Items that can be set:	default	Set range	Set requirements
02	120A	0A~250A	
11	60A	0A~250A	
12	48V	44~51.2V	<13 setting value
13	56v	48~58.0V	

Lithium (only suitable when communicated with BMS communication)

Battery type

Items that cannot be set: 02 19 20

Items that can be set:	default	Set range	Set requirements
11	20A	0A~250A	
12	50%	10%~95%	<13 setting value
13	95%	15%~100%	
21	20%	5%~50%	<12 setting value

User-Defined—Suitable for lead-acid battery, battery parameters can be set manually

	Items that	default	Set range	Set requirements
	can be set:			
	02	120A	0A~250A	
	11	60A	0A~250A	
	12	46V	44~51.2V	<13 setting value
	13	54V	48~58.0V	
	19	56.4V	48~58.4V	
	20	54V	48~58.4V	
	21	42V	40~48V	<12 setting value
1				

User-Defined 2 (suitable when lithium battery without BMS communication or communication protocol not matched with the inverter, battery parameters can be set manually)

21

BALL US2 OOS

		Items that	default		Set r	ange	Set requiren	nents
		can be set:						
		02	20A		0A~2			
		11 12	20A 48V		0A~2	250A 51.2V	<13 setting	value
		13	52V			51.2V 58.0V	<13 setting	value
		19	54V			58.4V		
		20	54V			58.4V	Suggestion=	-19
			J 7 7 V		70.42	JO. TV	setting value	
		21	46V		40~4	18V	<12 setting	
							'	
	Auto restart when overload	Restart disabl	e (default)			Restart enal	ole	_
06	occurs	Ldrs	dl S	00	36	Ldrs	ENA	006
	Auto restart when aver	Restart disabl	e (default)			Restart enal	ole	-
07	Auto restart when over temperature occurs	FULS	dl 5	00	วา๊	٤٦٢٥	ENR	ากกา
		230V (default	)			220V		
08	Output voltage	ONFn	530	00	98°	ONFn	950	008
00	Output voltage	240V				208V		
		ONFn	240	00	38	ONFn	805	008
		50Hz (default)	)			60Hz		
09	Output frequency	OUEF	50	00	) <b>9</b>	OULF	60	009
		AC)	60 <sub>^</sub>					
11	Maximum utility &Generator charging current	SPE 12000 ES SPE 10000 ES SPE 8000 ES: Note: If settin inverter will a	5: Default 60A Default 60A/ ng value in Pro	40A, 40A, 40A, 0	0A~: 0A~: 0A~1: 02 is	220A Settable 90A Settable. s smaller thar	e. I that in Progr	
12	Setting voltage point back to utility source when selecting "SBU priority" or "Solar first" in program 01	Heavily The default value and adjustable range vary in different Battery type, please refer to program 5 for details						
13	Setting voltage point back to battery mode when selecting "SBU priority" or "Solar first" in program 01	RC26 SHO* O 13  The default value and adjustable range vary in different Battery type, please refer to program 5 for details						
	Charger source priority: To	If this off grid source can be			_		dby or Fault n	node, charger
14	configure charger source priority. (After program 67 are enabled, this program is fixed SUN and cannot be set.)	Solar first	cso	0	۱٩̈́	priority. Utili	will charge by will charge energy is not a	

		Solar and Utilit	ty (default)		_			
		CG.PC	SNU	0	ļΫ́	Solar energy charge batter	-	ill both
		Only Solar	1002		0	Solar energy		
		CG.PC "	"DS0	0	ļΫ́	source no ma not.	itter utility is	available or
		If this PV Hybr only solar ener available and s	rgy can char					
		Alarm on (defa	ault)		0	Alarm off		0
15	Alarm control	P055	00	0	ŀŠ	P055	OFF	O IŠ
16	Backlight control	Backlight on (d	CONTRACTOR AND CO.	_	0	Backlight off		o
	backing the control	LC db	00	U	16	LEdb	OFF	0 16
17	Beeps while primary source is	Alarm on (defa	ault)		0	Alarm off		0
	interrupted	ALAñ	00	0	П	AL AT	OFF	רו ס
	Overload bypass: When enabled, the unit will	Bypass disable	(default)		0	Bypass enabl		0
18	transfer to line mode if	646 c	JI 5	0 1	8	64b	ENA	0 18
	overload occurs in battery mode.							
19	C.V. charging voltage.	נח	564	v	Ω	iQ		
	c.v. charging voltage.	Default 56.4V,			able			
20	Floating charging voltage.	FLEU Default 54.0V,	<b>5</b> 4[]	I <sup>v</sup> V Setta	O d	2 <b>0</b>		
21	Low DC cut-off voltage.	The default value and adjustable range vary in different Battery type, please refer to program 5 for details  Note: The low voltage alarm point is (program 21) +2V. When this value is reached, the machine reports 04.  When reach Low DC cut-off voltage:  1) If battery power is only power source available, inverter will shut down.  2) If PV energy and battery power are available, inverter will charge battery without AC output.  3) If PV energy, battery power and utility are all available, inverter will transfer to line mode and provide output power to loads, and charge the battery at the same time.						
		Parallel:			٥	L1 Phase:		0
	AC output mode	PCLL	PRL	08	23	PCLL	3P I	053
	AC output mode  *This setting is only available	L2 Phase:			_	L3 Phase:		
23	when the inverter is in standby mode (Switch off).	PCLL	365	08	23	PCLL	323	023
23	Note: Parallel operation can only work when battery connected	When the unit: "PAL" in progra equipment, 1 i Please select " "3P2" in progra program 23 fo	am 23. It red nverter in e 3P1" in prog am 23 for th	quires a ach ph gram 2 ae inve	3 inventions in the section of the s	erters to suppo the inverters o connected to L	ort three-pha connected to .2 phase and	L1 phase,

		Automatic (	(default)		The dry contact can intelligently
	Dry Contact Signal	91.7	8F0	02°4	generate a power-on or power-off signal to the generator based on the battery voltage.
24	* For details, please refer to Chapter <b>3.7</b>	Enable	EU8	° 250	The dry contact always sends a power- on signal.
		Disable	d) 5	024	The dry contacts always send a power-off signals.
28	Address setting (for expansion)	AddF	 	ozå	
	RS485 Communication protocol	PECL.	LOH	036	Protocol 1~50
36	CAN Communication protocol	PECL	EST	036	Protocol 51~99
37	Real time settingYear	50 18		อзจำ	Default 2018, range 2018~2099
38	Real time settingMonth	חסה	12	038	Default 01, range 01~12
39	Real time settingDate	982	13	038	Default 01, range 01~31
40	Real time settingHour	HOUF	13	OЧÕ	Default 00, range 00~23
41	Real time settingMinute	חוה	50	04 Î	Default 00, range 00~59
42	Real time settingSecond	SEC	50	очå	Default 00, range 00~59
		Battery equ	ıalization en	able	Battery equalization disable(default)
43	Battery equalization	69	ENR	043	E9 d15 043
		If "Flooded set up.	" or "User-D	efined" is se	lected in program 05, this program can be
44	Battery equalization voltage	Edn		04 <del>ใ</del>	
		Default 58.	4V, 48.0V~5	8.4V Settabl	e
45	Battery equalized time	111 11			Default 60min, 5min~900min Settable
		E9Ł	60	กฯร์	
		0.000	00	כרט	
		āl N			
46	Battery equalized timeout				Default 120min, 5min~900min Settable
		E9E0	150	046	

47	Equalization interval	48Y	Default 30days, 1 days~90 days Settable
		E9 30 04	٦
		Equalization activated immediation	off(default)
48	Equalization activated immediately	If equalization function is enable If "On" is selected in this progra immediately and LCD main page cancel equalization function until	ed in program 43, this program can be setup.  Im, it's to activate battery equalization  e will shows "E9". If "Off" is selected, it will  il next activated equalization time arrives this time, "E9" will not be shown in LCD
49	Utility charging time (This program can only be set when program 67 are not enabled)	0000(default) Allow utility to charge the battery all day run.  CHG EI T	The time allows utility to charge the battery. Use 4 digits to represent the time period, the upper two digits represent the time when utility start to charge the battery, setting range from 00 to 23, and the lower two digits represent the time when utility end to charge the battery, setting range from 00 to 23. (eg: 2320 represents the time allows utility to charge the battery is from 23:00 to the next day 20:59, and the utility charging is prohibited outside of this period)
50	Utility output time (This program can only be set when program 67 are not enabled)	0000(default) Allow utility r to power the load all day run.  OUP LIT	The time allows utility to power the load. Use 4 digits to represent the time period, the upper two digits represent the time when utility start to power the load, setting range from 00 to 23, and the lower two digits represent the time when utility end to power the load, setting range from 00 to 23. (eg: 2320 represents the time allows utility to power the load is from 23:00 to the next day 20:59, and the utility power is prohibited outside of this period)
54	Lithium battery strong charging execution cycle time.  (If program 05 is set to Li and set to ON, it means that the lithium battery is periodically forced to charge to SOC of 100%. OFF	OFF: Turn off periodic strong charging	ON: Turn on periodic strong charging. Default 30days, 1 days~90 days Settable
	indicates that the function is not enabled)		LIJ 030 054
55	Setting solar energy supply priority when selecting "SUB	Charge first (default)  SOF d BLU OSS	Solar energy provides power to charge battery as first priority. Solar energy provides power to the loads as second priority. Solar energy provides power to feed to grid as third priority.
	priority" in program 01	S.C.C.d. L.b.U. OSS	Solar energy provides power to the loads as first priority. Solar energy provides power to the charge battery as second priority. Solar energy provides power to feed to grid as third priority.

		SGC4 LUB OSS	Solar energy provides power to the loads as first priority. Solar energy provides power to feed to grid as second priority. Solar energy provides power to the charge battery as third priority (This program can only be set when program 67 are enabled)			
		NG relay enable(default)  OGFY ENR OSE	Grounding in inverter operation mode, ungrounded in grid operation mode			
56	NG relay enable setting	NG relay disable	No grounding in any mode			
	The power grid mode allows	Disable(default)	Enable			
57	the smart load output to remain on.	OP2 d(S OS1	OP2 ENA OSÎ			
		First time period	Smart load output start time			
		0000 00   058°	0000 SER 058			
			Smart load output shutdown time			
	Setting of the smart load	Second time period	OOOO ENJ OS8 Smart load output start time			
	output time period.  * Note: When time period 1 is	Second time period				
58	set to "Sta0000-End0000", it	0000 002 05 <b>8</b>	0000 SER 058			
	means that the smart load can output all time periods.		Smart load output shutdown time			
			0000 ENJ 058			
		Third time period	Smart load output start time			
		0000 003 05Ř	0000 SER 058			
			Smart load output shutdown time			
			0000 ENJ 058			
		hours and the last two digits represe	with the first two digits representing enting minutes. For example, Sta2300-output time range from 23:00 to 20:59			
59	The cut-off battery voltage point/SOC setting for the smart load output.	L OSS 480 V OSS  Default 42.0V, 40.0V~48.0V Settable Lithium battery mode: Default 60%, 20%~100% Settable				
60	Recovery battery voltage point/SOC setting for the smart load output.	BACH 53.0v, 050  Default 53.0v, 48.0v∼58.0v Settable Lithium battery mode: Default 90%, 20%~100% Settable				
61	Setting of PV power value for the smart load output to be turned on	PUL DEFault 0KW, 0KW~12KW Settable  SPE 12000 ES: Default 0KW, 0KW~12KW Settable  SPE 10000 ES: Default 0KW, 0KW~10KW Settable  SPE 8000 ES: Default 0KW, 0KW~8KW Settable				
62	Menu Return Settings	Disable(default)  TENU dl 5 062	Display screen page remains stuck			

		Enable			Automatically return to the main page	
		aenu	ENA	06Ž	after no human-machine interface operation within five minutes	
65	Generator run time	GEN	ΓυΠ	FLU	Default 00, range 01~23 The time allows Generator to work. Use 2 digits to represent the time period , setting range from 00 to 23. (eg: 02	
		HOUF	00	06\$	represents the time allows Generator to run for two hours.	
		Enable (defa	ENA	066	If BMS Communication Loss, The inverter 04 and 20 warning Icon flas hing , but enable to work for original	
66	BMS Communication Loss	Disable		000	status.  If BMS Communication Loss,	
		6.75.E	dl 5	06 <b>6</b>	The inverter 04 and 20 warning Icon flas hing and disable to work.(cut off the output and can't charge)	
		Feed to grid	disable(de		and	
67	Feed to grid configuration	EEE9	<u>a! S</u>	06 <sup>°</sup> 1	Solar energy feed to grid disable.	
		Feed to grid	ENR	06 1	Solar energy feed to grid enable.	
		South Africa	(Default)		If selected, acceptable feed-in grid	
	Set country customized Regulations	FING	SRF	06 <b>8</b>	voltage range will be195.5~253VAC. Acceptable feed-in grid frequency range will be 47~51.5Hz.	
		Europe			If selected, acceptable feed-in grid	
		FFNG	EUF	06 <b>8</b>	voltage range will be184~264.5VAC. Acceptable feed-in grid frequency range will be 51.5~47.5Hz.	
68	*This setting is only available when the program 67 is that	South Ameri	ca		If selected, acceptable feed-in grid	
	Feed to grid enable	FLUC	SRJ	06 <b>8</b>	voltage range will be184~264.5VAC. Acceptable feed-in grid frequency range will be 57~62Hz.	
		Asia			If selected, acceptable feed-in grid	
		FCNG	RSR	068	voltage range will be195.5~253VAC. Acceptable feed-in grid frequency range will be 47.5~51.5Hz.	
69	Feed grid power settings		m feed grid	by DS 9		
		SPE 12000 ES: Default 12KW, 0KW~12KW Settable SPE 10000 ES: Default 10KW, 0KW~10KW Settable SPE 8000 ES: Default 8KW, 0KW~8KW Settable				
70	Battery discharge current	SPE 12000 ES: Default 280A, 0A~280A Settable SPE 10000 ES: Default 240A, 0A~240A Settable SPE 8000 ES: Default 200A, 0A~200A Settable *If Program 05 is set to Li mode. The value LXXX in the lower left corner of				
		*If Program 05 is set to Li mode. The value LXXX in the lower left corner of the LCD is the maximum allowable discharge current of the lithium battery. The middle value is to set the maximum allowable discharge current value of the battery. The smaller of the two is the current limit value of the battery feed grid.				

		Feed to grid	disable(d	efault)		
71	Battery feed enable	FEEd Feed to grid	81 S	וורם	battery energy feed to grid disable.	
		FEEd		ורם ורם	battery energy feed to grid enable.	
72	Battery feed loss point	LOSS 460 0 0 2 Lithium battery mode: Default 40%, 30%~90% Settable The other battery mode: Default46.0V, 46.0V~52.0V Settable				
73	Battery feedback point	BACH 540 073 Lithium battery mode: Default 80%, 40%~100% Settable The other battery mode: Default 54.0V, 48.0V~54.0V Settable				
		First time pe	eriod		Battery feed start time	
		0800	00	07 <del>°</del>	OBOO SER OTY Battery feed shutdown time	
					1159 ENJ 014	
		Second time	period		Battery feed start time	
		חחבו	002	اباد ۵	1200 SER 074	
	Battery feed time	1500	UUC	074	Battery feed shutdown time	
74	* Note: When time period 1 is set to "Sta0000-End0000", it				1759 ENJ 074	
/4	means that the battery can feed the grid for the entire	Third time p	eriod		Battery feed start time	
	time period	1800	003	อา <del>ง</del>	1800 SER 074	
		1000	005	0	Battery feed shutdown time	
		* =			1959 ENJ 074	
		*There are three time periods for battery feeding that can be set, which can be achieved by setting the start feeding time and the ending feeding time. *The time setting consists of 4 digits, with the first two digits representing hours and the last two digits representing minutes. For example, Sta2300-End2059 represents battery feeding time range from 23:00 to 20:59 the next day.				
		First time pe	eriod		Grid charging start time	
		2000 	00 1	07Ŝ	2000 SER 07S	
	Grid charging time		י טט	כו ט	Grid charging shutdown time	
	* The setting is only valid				2359 ENJ 07Š	
	when <b>program 67</b> is enabled.  * Note: When time period 1 is	Second time	period		Grid charging start time	
75	set to"Sta0000-End0000", it means that charging can be	0000	002	07 <b>\$</b>	0000 SER 07\$	
	done during the entire time	0000	UUC	כו ט	Grid charging shutdown time	
	period; charging takes priority over power feeding.				0559 ENJ 07\$	
		Third time p	eriod		Grid charging start time	
		0000	007	07 <b>\$</b>	0600 SER 07\$	
		0600	003	כו ט	Grid charging shutdown time	
					อาร9 ยกส อาร์	

		achieved by setting the start *The time setting consists of hours and the last two digits	ds for grid charging that can be set, which can be feeding time and the ending feeding time.  4 digits, with the first two digits representing representing minutes. For example, Sta2300-rging time range from 23:00 to 20:59 the next			
76	Anti-backflow enable	ELEL ENA 076	Enable external CT anti-backflow function			
77	External CT sampling ratio	2000 [EF 07] Default 2000, 1000~9999 Se For example,2000 means the	ettable.			
78	Anti-backflow power  *The setting is only valid when <b>program 76</b> is enabled	SPE 12000 ES: Default 0kW, 0~12.0kW Settable SPE 10000 ES: Default 0kW, 0~10.0kW Settable SPE 8000 ES: Default 0kW, 0~8.0kW Settable  *For example, the anti-backflow power is set to 2KW Single: the anti-backflow power is 2KW. Single-phase parallel: If the number of parallel machines is (n) PCS, the total anti-backflow power of the parallel system is (2*n) KW.  Three-phase parallel: If the number of three-phase parallel machines is (x/y/z) PCS, the anti-backflow power of each phase line is (2 * x /2 * y /2 * z) KW.				
79	Grid peak shaving enable	disable(default)  CFI d dI S 079 enable  CFI d ENR 079	Disable external CT grid peak shaving function  Enable external CT grid peak shaving function  *If program 79 is enabled · Battery feeding to the grid is also enabled accordingly.			
80	Grid peak shaving power *The setting is only valid when <b>program 79</b> is enabled	SPE 12000 ES: Default 24kW, 0~24.0kW Settable SPE 10000 ES: Default 20kW, 0~20.0kW Settable SPE 8000 ES: Default 16kW, 0~16.0kW Settable SPE 8000 ES: Default 16kW, 0~16.0kW Settable *For example, the grid peak shaving power is set to 2KW Single: Grid peak shaving power is 2KW. Single-phase parallel: If the number of parallel machines is (n) PCS, the total grid peak shaving power of the parallel system is (2 * n) KW. Three-phase parallel: If the number of three-phase parallel machines is (x/y/z) PCS, the grid peak shaving power of each phase line is (2 * x / 2 * y / 2 * z) KW.				

### 4.3.2Hide settings

1) After pressing and holding UP and DOWN buttons at the same time for 3 seconds, the unit will enter PASS mode. Change the middle three numbers 000 to 111.

Program	Description	Setting O	otion		
rrogram	Description		Jeion -	0	SPE 12000 ES:
	UpsCap query	HCBP	120	רכם	The UpsCap of the current model is 12.0KW.
27	(View the UpsCap size of	ucoo	100	0	SPE 10000 ES:
	the current model.)	HERP	10.0		The UpsCap of the current model is 10.0KW.
		HCBP	8.0	רכח	SPE 8000 ES: The UpsCap of the current model is 8.0KW.
			<u>U.U</u>	יייי	Users can calibrate the grid voltage within a range
		554,			of ± 9V based on the current grid voltage
	Cuid innut valence				parameters displayed in the upper left corner of
29	Grid input voltage calibration				the LCD screen. Calibrate the grid voltage by
	Calibration	cc	7711	0 20	inputting the actual grid voltage.
		CLqn	554 <sup>,</sup>	029	*Note: The grid voltage must be greater than 90V
					for voltage calibration Users can calibrate the battery voltage within a
		49,9,	49,9*		range of ± 9V based on the current battery
					voltage parameters displayed in the upper left
30	Battery voltage calibration				corner of the LCD screen. Calibrate the battery
				0.00	voltage by inputting the actual battery voltage.
		PBFn	49.9	030	* Note: The battery voltage must be greater than
					40V for voltage calibration.  Users can calibrate the inverter voltage within a
			1 15°		range of ± 9V based on the current inverter
	T				voltage parameters displayed on the LCD screen.
31	Inverter voltage calibration				Input half of the true inverter voltage to complete
	Calibration			on °	the calibration.
		I Un' I	115	03 !	*Note: The inverter voltage must be greater than 90V for voltage calibration
					Users can calibrate the output voltage within a
			530,		range of $\pm$ 9V based on the current AC output
	AC output voltage				voltage parameters displayed on the LCD screen.
32	calibration				Calibrate the AC output voltage by inputting the
		ONFo	530 <sub>°</sub>	032	actual AC output voltage. Note: AC output voltage must be greater than
		UUL.	C 10.	UJL	90V to perform voltage calibration
					Users can perform PV1 voltage calibration within a
		299,			range of $\pm$ 9V based on the current PV1 voltage
					parameters displayed in the upper left corner of
33	PV1 voltage calibration				the LCD screen. Enter the real PV1 voltage to calibrate the voltage of PV1.
			200	0 2 2	Note: PV1 voltage must be greater than 150V for
		6n' l	299 <sub>°</sub>	033	voltage calibration
					Users can perform PV2 voltage calibration within a
		299,			range of ± 9V based on the current PV2 voltage
34	PV2 voltage calibration				parameters displayed in the upper left corner of the LCD screen. Enter the real PV2 voltage to
34	PVZ VOILAGE CAIIDIALIOII			_	calibrate the voltage of PV2.
		թսշ	299,	034	Note: PV2 voltage must be greater than 150V for
				יכט	voltage calibration
		disable(default)			The inverter cannot automatically restart after
		E.C.S.E	a! S	05 Î	reporting a fault.
51	Fault restart	enable			The important of the section of the
			0.00	oc°.	The inverter can automatically restart after reporting a fault.
		FITSE	ENR	05 (	reporting a rault.

		disable(de	fault)		
		pul S	d! S	052°	Disable PV ISO detection function.
52	PV ISO detection	enable			
		Pul S	ENR	05Ž	Enable PV ISO detection function.
		disable(de	fault)	0	Disable and and and and adoption for ation
53	Redundant relay detection	EŁL	d! S	053	Disable redundant relay detection function.
)55	Redundant relay detection	enable		٥	Enable redundant relay detection function.
		EEL	ENR	053	,
		disable(de	,	٥	Disable inverter current DC component protection function.
63	Inverter current DC	<u> </u>	d! S	063	
	component protection	enable	5.00	0.00	Enable inverter current DC component protection function.
		9CI	ENR	063	Users can calibrate the generator voltage within a
		553°			range of ± 9V based on the current generator
64	Generator input voltage calibration				voltage parameters displayed in the upper left corner of the LCD screen. Enter the real generator
		c c ou		٥٥٠	voltage to calibrate the voltage of generator
		CE Un	553 <sub>°</sub>	üby	*Note: The generator voltage must be greater than 90V for voltage calibration.
		disable(default)		٥	Disable CCCI protestion function
81	CECI protection	GFCI	d! S	08 1	Disable GFCI protection function.
81	GFCI protection	enable		۰	Enable CECI protection function
		GECI	ENA	08 1	Enable GFCI protection function.
		FE4	սլլ		High voltage loss protection point can be set
82	Feed grid voltage loss protection point				range: 240-280Vac, default 253Vac. Low voltage loss protection point can be set
	protection point	2S3 <sup>,</sup>	195,	082 S80	range: 170-200Vac, default 195Vac.
		50Hz syste	em		High frequency loss protection point can be set
		FE9	50 <sub>**</sub> 8	-64	range: 51.0-55.0Hz, default 55Hz.
					Low frequency loss protection point can be set range: 45.0-49.0Hz, default 45Hz.
83	Feed grid frequency loss	S (S	470	083	SSO 450 083
	protection point	60Hz syste	em		High frequency loss protection point can be set
		FEA	50 <sub>**</sub>	FC9	range: 61.0-65.0Hz, default 65Hz.
					Low frequency loss protection point can be set range: 55.0-59.0Hz, default 55Hz.
		6 (S	570	083	65.0 SS0 083
		د. ن	٠.٠		000 000

2)After pressing and holding UP and DOWN buttons at the same time for 3 seconds, the unit will enter PASS mode. Change the middle three numbers 000 to 305.

Program	Description	Setting	Option		
35	Reset to factory settings	Reset:	rse	03Š	Press the "ENTER" button twice to confirm the selection, then press "ESC" to return and complete the settings.

## 5. Parallel Installation Guide

Introduction

This inverter can be used in parallel with two different operation modes.

- 1. Parallel operation in single phase with up to 9 units.
- 2. Maximum 9 units work together to support 3-phase equipment. 7 units support one phase maximum.

#### 5.1 Parallel accessories



Parallel communication cable


### 5.2 Points of Attention for Parallel


- Ensure that all breakers in the line on the load side are disconnected.
- Be sure the length of all battery cables is the same. Otherwise, there will be voltage difference between inverter and battery to cause parallel inverters not working.
- Be sure that all inverters will share the same battery bank. Otherwise, the inverters will transfer to fault mode.
- Each inverter in the parallel system can only be connected to a separate PV string, and it is prohibited for multiple PV ports to share the same string, and there is a risk of blowing up the inverter.
- Recommended battery capacity

Inverter parallel numbers	2	3	4	5	6	7	8	9
SPE 12000 ES-	800AH	1200AH	1600AH	2000AH	2400AH	2800AH	3200AH	3600AH
Battery Capacity								
SPE 10000 ES-	600AH	900AH	1200AH	1500AH	1800AH	2100AH	2400AH	2700AH
Battery Capacity	OUDAII	JUUAII	1200AI1	1300AI1	IOUUAII	2100AII	ZHOUATT	2700AII
SPE 8000 ES-	600AH	900AH	1200AH	1500AH	1800AH	2100AH	2400AH	2700AH
Battery Capacity	OUUAH	900AH	1200AH	1300AH	1000411	2100AH	2400AH	2700AH


#### **5.3 Wire Connections**


#### 5.3.1 Single-phase parallel wire connection

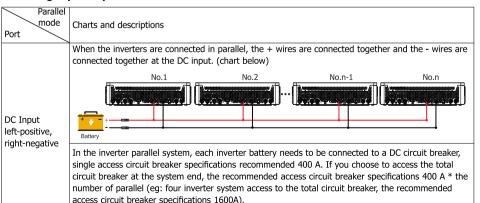

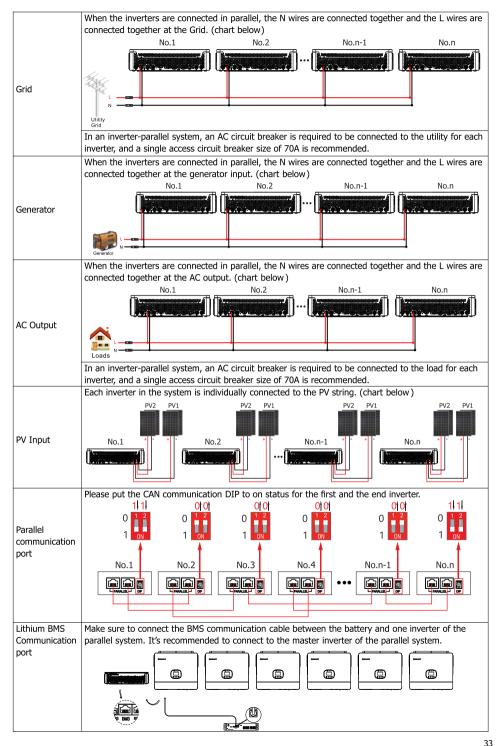

#### 5.3.2 Three-phase parallel wire connection

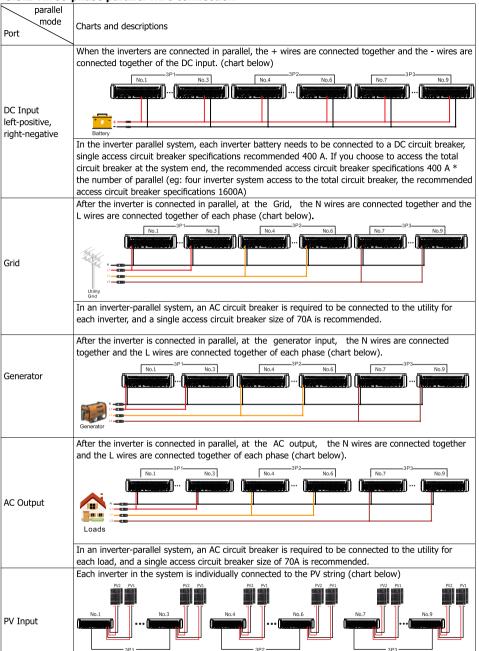


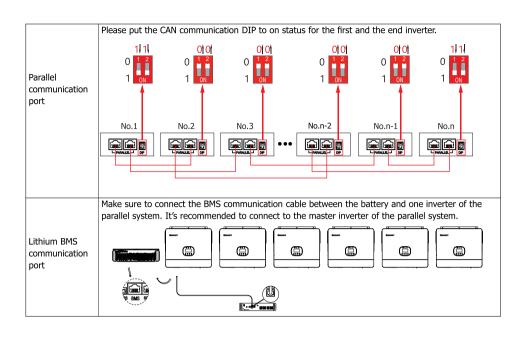

#### 5.3.3 CT wire connection


The following introduces the CT wire connection method of single-phase parallel system and three-phase parallel system.

Single-phase parallel wire connection

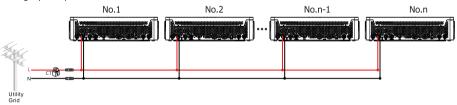

Only one CT needs to be connected to the inverter NO.1 and placed near the meter. Other inverters no longer need an external CT, and the entire single-phase parallel system only needs one external CT.

three-phase parallel wire connection

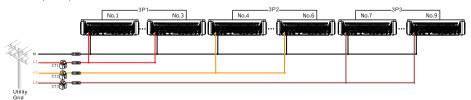

Select one inverter in each of the three phases to connect to the CT. The entire three-phase parallel system requires three external CTs, which are placed near the meter.


35

### **5.4 Parallel Example**

Parallel Operation in Single Phase

Single-phase parallel master and slave do not need to be set, the system automatically assigns the master and slave according to the order of start-up, the first one to start is the master, and the rest are the slaves. Be sure to confirm that the wiring is correct, the wiring is shown in the following figure. Nine inverters in parallel:

Power Connection

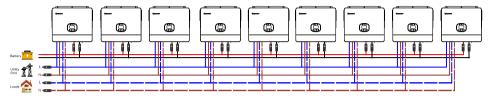

#### Parallel Operation in Three Phase


Try to connect to the utility at the same time after three-phase parallel connection.

When setting up three-phase parallel, you need to define the master and the slave, see the 5.5 for the specific setting method. Be sure to confirm that the wiring is correct, the wiring method is shown in the table below. The


following chart is an example of (3+3+3) (4+3+2)

#### (3+3+3)Three inverters in one phase, three inverters in second phase and three inverters for the third phase:

#### **Power Connection**

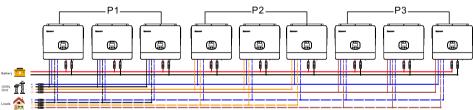

# (4+3+2) Four inverters in one phase, three inverters in second phase and two inverters for the third phase: Power Connection

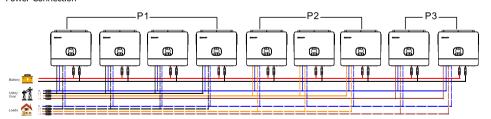

### 5.5 Parallel setup and display

Refer to Program 23 on Page 23

#### Parallel in Single Phase

Step 1: Check the following requirements before commissioning:

- Correct wire connection
- Ensure all breakers in Line wires of load side are open and each Neutral wires of each unit are connected together.

Step 2: Turn on each unit and set "PAL" in LCD setting program 23 of each unit. And then shut down all units.


**Note:** It's necessary to turn off switch when setting LCD program. Otherwise, the setting cannot be programmed.

Step 3: Turn on each unit.

LCD display in Master unit	LCD display in Slave unit
0 230° 0.1°	0 230° 0.1.
■ ····································	00 S6.4× SLI

Note: Master and slave units are randomly defined.

Step 4: Switch on all AC breakers of Line wires in AC input. It's better to have all inverters connect to utility at the same time. If not, it will display warning 15.

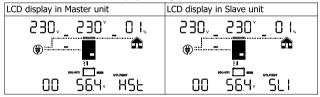

Step 5: If there is no more fault alarm, the parallel system is completely installed.

Step 6: Please switch on all breakers of Line wires in load side. This system will start to provide power to the load.

#### Parallel in Three Phase


Step 1: Check the following requirements before commissioning:

- Correct wire connection
- Ensure all breakers in Line wires of load side are open and each Neutral wires of each unit are connected together.


Step 2: Turn on all units and configure LCD program 23 as P1, P2 and P3 sequentially. Then shut down all units.

**Note:** It's necessary to turn off switch when setting LCD program. Otherwise, the setting cannot be programmed.

Step 3: Turn on all units sequentially. Please turn on HOST inverter first, then turn on the rest one by one.

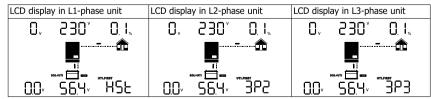

Step 4: Switch on all AC breakers of Line wires in AC input. If AC connection is detected and three phases are matched with unit setting, they will work normally. Otherwise, they will display warning 15/16 and will not work in the line mode.

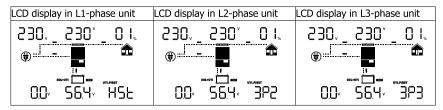

Step 5: If there is no more fault alarm, the system to support 3-phase equipment is completely installed.

Step 6: Please switch on all breakers of Line wires in load side. This system will start to provide power to the load.

**Note 1:** If there's only one inverter in L1-phase, the LCD will show as "HST". If there is more than one inverter in L1-phase, the LCD of the HOST inverter will show as "HST", the rest of L1-phase inverters will show as "3P1".


**Note 2:** To avoid overload occurring, before turning on breakers in load side, it's better to have whole system in operation first

**Note 3:** Transfer time for this operation exists. Power interruption may happen to critical devices, which cannot bear transfer time.


**Note4:** In a single-phase parallel system, when some inverters are connected to solar energy, energy can be obtained from the AC output end due to the parallel connection of the AC output end, resulting in energy transmission between inverters. Therefore, the AC input and AC output power displayed on the LCD display screen of a single inverter cannot accurately represent the energy flow of the inverter. It needs to be judged based on the total AC input and AC output power of the entire parallel system. (This phenomenon also exists between inverters in the same phase in a three-phase parallel system).

### 5.6 Example of a parallel system diagram

Single-phase parallel wire connection:

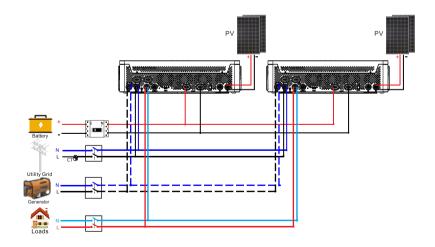

Three-phase parallel wire connection:

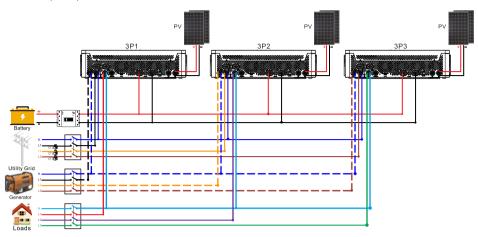

## 6. Fault Reference Code

## **6.1 Fault Reference Code**

Fault Code	Fault Event	Icon on
02	Over temperature	02
03	Battery voltage is too high	
05	Output short circuited	
06	Output voltage is too high.	05
07	Overload time out	
08	Bus voltage is too high	08
09	Bus soft start failed	09
11	The main relay failed	
51	Over current or surge	S I
52	Bus voltage is too low	52-
53	Inverter soft start failed	53
58	Output voltage is too low	58
60	Negative power fault	50-
61	PV voltage is too high	<b>6</b> !
62	Internal communication error	<b>62</b>
65	BUS voltage imbalance	65
66	GFCI is too high	55
67	DCI failed	
80	CAN fault	80

## **6.2 Warning Indicator**

Warning Code	Warning Event	Audible Alarm	Icon flashing
01	Fan is locked when inverter is on	Beep 3 times every second	0 1^
02	Over temperature	Beep once every second	02▲
03	Battery is over-charged	Beep once every second	034
04	Low battery	Beep once every second	04△
07	Overload	Beep once every 0.5 second	07▲
10	Output power derating	Beep twice every 3 seconds	10 △
13	Solar charger stops due to high PV voltage	Beep once every second	13△
14	Solar charger stops due to overload	Beep once every second	4 A
15	Parallel input utility grid different	Beep once every second	15 <sup>a</sup>
16	Parallel input phase error	Beep once every second	16 △
17	Parallel output phase loss	Beep once every second	
18	BUS over current	Beep once every second	!8▲
19	Battery disconnect	No beep	¦9^
20	BMS communication error	Beep once every second	20▲
21	PV power insufficient	Beep once every second	2 I <sub>▼</sub>
22	Parallel forbidden without battery	Beep once every second	22▲
23	The parallel version is different	Beep once every second	23.4
25	Parallel inverters' capacity different	Beep once every second	25△
26	ISO detection failed	Beep once every second	26^
28	GFCI error	Beep once every second	28▲
29	LLC overcurrent	Beep once every second	29^
30	BUS low voltage	Beep once every second	30 △
31	Inconsistent switches	Beep once every second	3 14
36	Total over voltage	Beep once every second	36 △
37	Total under voltage	Beep once every second	374
38	Discharge over voltage	Beep once every second	38△
39	Charge over voltage	Beep once every second	39^
40	Discharge over temperature	Beep once every second	40 △
41	Charge over temperature	Beep once every second	4 14
81	Host loss	Beep once every second	8 14

41

# 7. Specifications

## 7.1 PV Specification

It's applicable to Grid Tie & Hybrid & Off Grid					
Model	SPE 12000 ES	SPE 10000 ES	SPE 8000 ES		
Max. power	15000W 12500W 10000W				
Max. PV Array Open Circuit Voltage		550Vdc			
Nominal PV Voltage	380Vdc	380Vdc	380Vdc		
PV Start-up Voltage	120Vdc±10V				
PV Array Voltage High Loss	550Vdc				
PV Array Voltage High Comeback	520Vdc				
PV Array Voltage Low Loss	60Vdc				
PV Array Voltage Low Back	120Vdc				
PV MPPT Voltage Range		60Vdc ~ 480Vdc			
PV MPPT Voltage Low Loss	60Vdc				
PV MPPT Voltage Low Back	70Vdc				
Number of MPP Trackers	2				
Max. DC Input current/ per string	2*27Amp 2*27Amp 2*27Amp				
PV Voltage Accuracy	+/-5V				

## 7.2 AC Input Specification

It's applicable to Hybrid & Off-Grid							
Model	SPE 12000 ES	SPE 12000 ES   SPE 10000 ES   SPE 8000 ES					
Nominal Input Voltage		230Vac					
Low Loss Voltage	170Vac±7	V(UPS); 90Vac±7V(A	Appliances)				
Low Loss Return Voltage	180Vac±7V	(UPS); 100Vac±7V (	(Appliances)				
High Loss Voltage		280Vac±7V					
High Loss Return Voltage		270Vac±7V					
Max AC Input Voltage		300Vac					
Nominal Input Frequency	50Hz	50Hz / 60Hz (Auto detection)					
AC input frequency range		40.0 ~ 65.0Hz					
AC input frequency comeback value		42.0/63.0Hz					
Max. AC Input current	70Amp (	70Amp (Include Loads and Charging)					
Rating of Transfer Relay	70Amp (	Include Loads and C	Charging)				

## 7.3 Grid Feeding Specification

It's applicable to Grid-tie & Hybrid						
Model	SPE 12000 ES	SPE 10000 ES	SPE 8000 ES			
Nominal output voltage	230Vac					
Nominal output frequency	50H	Iz / 60Hz (Auto detecti	on)			
Max feeding power	12000W	10000W	8000W			
Output voltage range	195.5~253.0VAC (±3%) @Asia regulation 184~264.5VAC (±3%) @Europe regulation 184.0~264.5VAC (±3%) @South America regulation 195.5~253.0VAC (±3%) @South Africa regulation (default)					
Output voltage comeback value	205.0~243.0VAC (±3%) @Asia regulation 194.0~254.5VAC (±3%) @Europe regulation 194.0~254.5VAC (±3%) @South America regulation 195.5~253.0VAC (±3%) @South Africa regulation (default)					

Operational frequency range	49.0~	51.0Hz (±0.1Hz) @Asi	a regulation			
	47.5~5	1.5Hz (±0.1Hz) @Euro	pe regulation			
	57.0~62.0Hz (±0.1Hz) @South America regulation					
	47.0Hz~51.5Hz (±3%)@South Africa regulation (default)					
Output frequency comeback value	49.5~50.5Hz (±0.1Hz) @Asia regulation					
	48~51Hz (±0.1Hz) @Europe regulation					
	57.5~61.5Hz (±0.1Hz) @South America regulation					
	47.0~51.5Hz (±	0.1Hz) @South Africa r	egulation ( default)			
Output current	52.2A	43.5A	34.8A			
O/P current distortion		<5%				
O/P current DC component	<300mA <250mA <200mA					
Power Factor	0.8 leading to 0.8 lagging					
Max. Conversion Efficiency(PV/AC)	96.5%					
European Efficiency@ V nominal (PV/AC)	95.5%					

## 7.4 Battery Mode Specification

It's applicable to Grid-tie & Hybrid							
Model	SPE 12000 ES	SPE 10000 ES	SPE 8000 ES				
Nominal Output Power	12000W	12000W 10000W 8000W					
Max Discharge Current	280A	240A	200A				
Waveform		Pure Sine Wave					
Nominal Output Voltage		230Vac					
Nominal Output Frequency		50/60Hz auto sensing					
Output Voltage Distortion	<3% for linear loa	<3% for linear load, <5% for non-linear load @ V nominal					
Output DC offset		<150mV					
Peak Efficiency		95%					
No Load Power Consumption		<75W@Rate Voltage					
Transfer Time		<20ms@Single					
Transfer Time		<30ms @ Parallel					
Output Parallel-able		Yes					

## 7.5 Two Load Output Power Specification

It's applicable to Hybrid & Off-Grid			
Model	SPE 12000 ES	SPE 10000 ES	SPE 8000 ES
Full Load Output Power	12000W	10000W	8000W
Maximum Main Load	12000W	10000W	8000W
Maximum smart load	8000W	8000W	8000W

## 7.6 Overload Capability Specification

It's applicable to Hybrid & Off-Grid		
Line Mode @>70A AC input current, 1min		
	5sec, @>120% Load	
Battery Mode	10sec, @103%~120%	
	4-cycle, short-circuits	

## 7.7 Battery & Charger Specification

		SPE 8000 ES			
48Vdc					
46.0Vdc					
Default 30	%, Low DC Cut-off S	SOC +10%			
4	44.0Vdc @ load < 20%				
	<del>-</del>				
40.8V	′dc @ 20 <sup>°</sup> % ≤ load <	50%			
Lo	w DC Cut-off SOC +	5%			
Lov	v DC Cut-off SOC +1	.0%			
Defau	Dofault 2004 E04 - E094 cottable				
	·				
30.11	, , ,				
250Amn		190Amp			
· · · · · · · · · · · · · · · · · · ·	·	190Amp			
· · · · · · · · · · · · · · · · · · ·	·	190Amp			
250/1111	· · · · · · · · · · · · · · · · · · ·	130/11/19			
	54.0Vdc				
	60Vdc				
	3-step				
U					
Bulk Voltage					
Float Voltage					
Bulk Absorption Floeting					
				44.42.8V 44.44.8V 4.40.8V 33 Lor Lov Defau 56.4V 250Amp 250Amp 250Amp	Default 30%, Low DC Cut-off 3  44.0Vdc @ load < 20' 42.8Vdc @ 20% ≤ load < 40.4Vdc @ load ≥ 50' 46.0Vdc @ load ≥ 50' 46.0Vdc @ load ≥ 50' 42.4Vdc @ load ≥ 50' 42.4Vdc @ load ≥ 50' 42.0Vdc @ load < 20' 40.8Vdc @ 20% ≤ load < 38.4Vdc @ load ≥ 50' Low DC Cut-off SOC +1  Default 20%, 5%~50% sc 56.4Vdc(C.V. charging vo 60Vdc 250Amp 220Amp 250Amp 220Amp 250Amp 220Amp 250Amp 220Amp 56.4Vdc 54.0Vdc 60Vdc 3-step

## 7.8 Environmental

Model	SPE 12000 ES	SPE 10000 ES	SPE 8000 ES
Operation Temperature Range		-10°C ~ 50°C	
Storage Temperature Range	-15°C ~ 60°C		
Altitude	<2000m		
Relative humidity	5% ~ 95% non-condensing		
Audible Noise	<75dB		
Cooling	DC FAN		
Safety Certification	CE		

## 7.9 Mechanical Specification

Model	SPE 12000 ES	SPE 10000 ES	SPE 8000 ES
Housing Dimension (L*W*H), mm	550*465*150 mm	550*465*150mm	550*465*150mm
Packing Dimension (L*W*H), mm	705*625*260 mm	705*625*260mm	705*625*260mm
Housing Color	White	White	White
Net Weight, kg	21.5	21.5	21.5
Gross Weight, kg	25.5	25.5	25.5

## 8. Appendix

### Appendix I. Fault information and processing

The energy storage inverter is designed according to the off-grid connected operation standard and meets the safety requirements and electromagnetic compatibility requirements. Before leaving the factory, the inverter undergoes several rigorous tests to ensure that the inverter can operate reliably.



If any of the fault messages listed in Table 6-1 appear on your inverter and the fault has not been removed after restarting, please contact your local dealer or service center.
You need to have the following information ready.

- 1. Inverter serial number;
- 2. The problem description (including the fault code and indicator status displayed on the LCD, or specific fault video and picture) is as detailed as possible.
- 3. Basic system component information (such as batteries, photovoltaic panels, load usage and specifications)
- 4. Your contact information.

In order to give you a clearer understanding of the inverter's fault information, we will list all possible fault codes and their descriptions when the inverter is not working properly

error code	Description	Solutions	
F01	Fan is locked	1.Check whether all fans are working properly. 2.Replace the fan.	
F02	Internal temperature of component is over 100°C.	Check whether the air flow of the unit is blocked or whether the ambient temperature is too high.	
	Battery is over-charged.	Restart the unit	
F03	The battery voltage is too high	1.Measure battery voltage in DC input. (Check battery SOC in LCD when use Li battery)     2.Adjust the charging current to less than 0.2C     3.Check if spec and quantity of batteries are meet requirements.	
W04	Battery voltage is too low	1.Measure battery voltage in DC input. (Check battery SOC in LCD when use Li battery)     2.Recharge the battery.	
F05	Output short circuited	Disconnect load and restart the unit     Check if wiring is connected well and remove abnormal load.	
F07	Overload time out	Reduce the connected load by switching off some equipment.	
F08	Bus voltage is too high	1.If you connect to a lithium battery without communication, check whether the voltage points of the program 19 and 21 are too high for the lithium battery.      2. Restart the unit	
F11/F12	Relay detection failed	Restart the unit	
F09/F53/F57	Bus soft start failed	Restart the unit	
W15	The input status is different in parallel system.	Check if AC input wires of all inverters are connected well.	
W16	Input phase is not correct.	Change the input phase S and T wiring.	
W17	The output phase not correct in parallel.	1.Make sure the parallel setting is the same System (single or parallel; 3P1,3P2,3P3).      2.Make sure all phases inverters are power on.	
	lead acid battery disconnect	Check if spec and quantity of batteries are meet requirements.	
W19	Lithium battery disconnect	Check BMS communication cable connection     Check setup parameters	

W20	BMS communication error	Check whether communication line is correct connection between inverter and battery.     Check whether BMS protocol type is correct setting.	
W31	Inconsistent switches	Check if all inverter switches are closed	
F29/F51	Over current or surge	Restart the unit	
F52	Bus voltage is too low	Restart the unit	
F55	Output voltage is unbalanced	Restart the unit	
F61	PV voltage is too high	Measure whether the PV voltage in the DC input is consistent with the value displayed on the LCD screen.     If consistent, standardize the parallel connection method of PV panels.	
F62	Internal communication error	Restart the unit	
F65	BUS voltage imbalance	Restart the unit	
F66	GFCI is too high	1.Check if the load equipment has a leakage phenomenon     2. Restart the unit	
F67	DCI failed	Restart the unit	
F80	CAN fault	Check whether the parallel communication cables are connected well.	
F81	Host loss	2. Check whether Program 23 settings are right for the parallel system.	

Other Problem	LCD/LED/Buzzer	Explanation	What to do
Unit shuts down Automatically during startup process.	LCD/LEDs and buzzer will be active for 3 seconds and then complete off.	The battery voltage is too low. (<1.91V/Cell)	Re-charge battery.     Replace battery.
No response after power on.	No indication.	1.The battery voltage is far too low. (<1.4V/Cell) 2.Battery polarity is connected reversed.	1.Check if batteries and the wiring are connected well.     2.Re-charge battery.     3.Replace battery.
	Input voltage is 0 on the LCD and green LED is flashing.	Input protector is tripped.	Check if AC breaker is tripped and AC wiring is connected well.
Mains exist but the unit works in battery mode.	Green LED is flashing.	Insufficient quality of AC power (Shore or Generator)	1.Check if AC wires are too thin and/or too long.     2.Check if generator (if applied) is working well or if input voltage range setting is correct. (UPS → Appliance)
	Green LED is flashing.	Set "Battery First" or "Solar First" as the priority of output source.	Change output source priority to Utility first.
When it's turned on, internal relay is switching on and off repeatedly.	LCD display and LEDs are flashing	Battery is disconnected.	Check if battery wires are connected well.

**Note:** To restart the inverter, all power sources need to be disconnected. After the LCD screen light is off, only use the battery to boot.

47

## **Appendix II Restore factory settings**

After pressing and holding UP and DOWNbuttons at the same time for 3 seconds, the unit will enter PASSmode. Changethe middlethreenumbers000 to 305 Press the "ENTER" button twice to confirm the selection, then press "ESC" to return and complete the settings.

Program	Setting Optio	n	
PASS	PASS	305	000

## **Appendix III Battery Equalization**

		Battery equalization enable	Battery equalization disable(default)			
43	Battery equalization	E9 ENA 043	E9 d15 043			
		If "Flooded" or "User-Defined" is selected in program 05, this program can				
		be set up.				
44	Battery equalization	EQU S84 044				
	voltage	Default 58.4V, 48.0V~58.4V Settable	•			
		21.0				
45	Battery equalized time		Default 60min, 5min~900min Settable			
		E9L 60 04\$				
		an				
46	Battery equalized timeout	1000 99	Default 120min, 5min~900min			
10	battery equalized timeout	50.0	Settable			
		E9E0 120 046				
		983				
47	Equalization interval		Default 30days, 1 days~90 days Settable			
		E9 30 041	Settable			
		Equalization activated immediately on	Equalization activated immediately off(default)			
		E9 ON 048	E9 0FF 04 <b>8</b>			
48	Equalization activated immediately	If equalization function is enabled in program 43, this program can be setup.				
	ininculately	If "On" is selected in this program, it's to activate battery equalization immediately and LCD main page will shows "Eq". If "Off" is selected, it will				
			xt activated equalization time arrives			
			time, "E9" will not be shown in LCD			
		main page.				


Equalization function is added into charge controller. It reverses the buildup of negative chemical effects like stratification, a condition where acid concentration is greater at the bottom of the battery than at the top. Equalization also helps to remove sulfate crystals that might have built up on the plates. If left unchecked, this condition, called sulfation, will reduce the overall capacity of the battery. Therefore, it's recommended to equalize battery periodically.

#### How to Apply Equalization Function

You must enable battery equalization function in monitoring LCD setting program 43 first. Then, you may apply this function in device by either one of following methods:


- 1. Setting equalization interval in program 47.
- 2. Active equalization immediately in program 48.
  - When to Equalize

In float stage, when the setting equalization interval (battery equalization cycle) is arrived, or equalization is active immediately, the controller will start to enter Equalize stage.

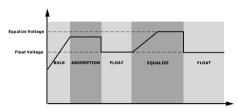


#### • Equalize charging time and timeout

In Equalize stage, the controller will supply power to charge battery as much as possible until battery voltage raises to battery equalization voltage. Then, constant-voltage regulation is applied to maintain battery voltage at the battery equalization voltage. The battery will remain in the Equalize stage until setting battery equalized time is arrived.

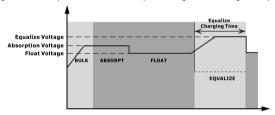

However, in Equalize stage, when battery equalized time is expired and battery voltage doesn't rise to battery equalization voltage point, the charge controller will extend the battery equalized time until battery voltage achieves battery equalization voltage. If battery voltage is still lower than battery equalization voltage when battery equalized timeout setting is over, the charge controller will stop equalization and return to float stage.

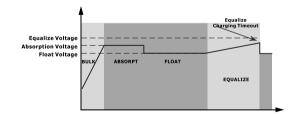

## **Appendix IV Routine maintenance**

To ensure the long-term and good operation of the energy storage system, it is recommended to perform the routine maintenance as described in this section (Cleaning and maintenance of the inverter must be carried out with the power supply disconnected to ensure personal safety.)

Items	Methods	Maintenance interval
	Regularly check the surface of the inverter for	Once every six months to
System cleanliness for	dust or other debris and clean it with a dust sponge.	one year
inverter	<ul> <li>Regularly check that radiators and vents are not covered with dust and clean them with a soft brush or compressed air.</li> </ul>	Once every 3 months.
	Check if any cable connection is off or loose.	
	Check if any cable is damaged, and especially if	
	there are cuts on the sheath where the cable	
Electrical	contacts with the metal surface.	Half a year after first
connection	Check the internal circuit boards and components	debugging and testing,
	of the inverter for abnormalities, such as damage,	and once every six months
	discoloration, etc., and repair and replace them in a	to one year thereafter.
0 "	timely manner.	
Grounding reliability	Check if the grounding cable is grounded reliably.	
	Periodically check the input voltage output voltage	
	and current of the inverter to ensure that it is	
Normal operation	operating within its rated range.	
	Regularly check the operating status and	
	performance parameters of the inverter via the	
	inverter's monitoring system or display.	
	Ensure that the inverter is installed in a dry, well-	
Other Maintenance	ventilated environment, protected from humidity,	
	heat or excessive dust.	


## **Appendix V WIFI Monitoring**

Plug cube WIFI into the WIFI/4G port. Scan the QR code below to download ShinePhone, also you can search ShinePhone in iOS or

Google Play Store, download and install it.

Note: 1. Make sure you download the latest version.

2. For further information please visit server. growatt.com

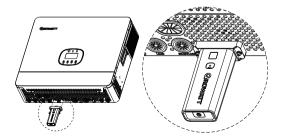



[Android & iOS]